

How to build V87-V89



FOR VOLVO CARS MANUFACTURING – HOW TO BUILD V87-V89

October 2023

Only when this packaging instruction is followed and with PacsOn International AB specified original articles, the unit is valid for load with 300 kg for overseas transport. If the load is higher, please contact Volvo Cars or PacsOn International AB for support. Units identified as not following this assembly instruction and found broken, will be subject for claim and parts damaged will consequently be charged back to the supplier.

- 1 Special pallet.
It is not possible to use standard pallets.



- 2 Turn the container around and put it on the pallet. The corners on the container will be fixed over pallet in all four corners.



- 3A Mandatory!
Push all four corners on the container, stick the corner lists through the holes.



How to build V87-V89



FOR VOLVO CARS MANUFACTURING – HOW TO BUILD V87-V89

October 2023

Only when this packaging instruction is followed and with PacsOn International AB specified original articles, the unit is valid for load with 300 kg for overseas transport. If the load is higher, please contact Volvo Cars or PacsOn International AB for support. Units identified as not following this assembly instruction and found broken, will be subject for claim and parts damaged will consequently be charged back to the supplier.

- 3B The corner lists shall be standing at the corners of the pallet.



- 4 Turn the lid upside down, fold the edges and lock all four corners.



How to build V87-V89



FOR VOLVO CARS MANUFACTURING – HOW TO BUILD V87-V89

October 2023

Only when this packaging instruction is followed and with PacsOn International AB specified original articles, the unit is valid for load with 300 kg for overseas transport. If the load is higher, please contact Volvo Cars or PacsOn International AB for support. Units identified as not following this assembly instruction and found broken, will be subject for claim and parts damaged will consequently be charged back to the supplier.

- 5 Mandatory!
Put the lid sheet, article number 2052559 into the lid and push it to lock.



- 6 Put the lid over the container and strap it with two straps, use marks on the box as guideline.






How to build V87-V89

FOR VOLVO CARS MANUFACTURING – HOW TO BUILD V87-V89

October 2023

Only when this packaging instruction is followed and with PacsOn International AB specified original articles, the unit is valid for load with 300 kg for overseas transport. If the load is higher, please contact Volvo Cars or PacsOn International AB for support. Units identified as not following this assembly instruction and found broken, will be subject for claim and parts damaged will consequently be charged back to the supplier.

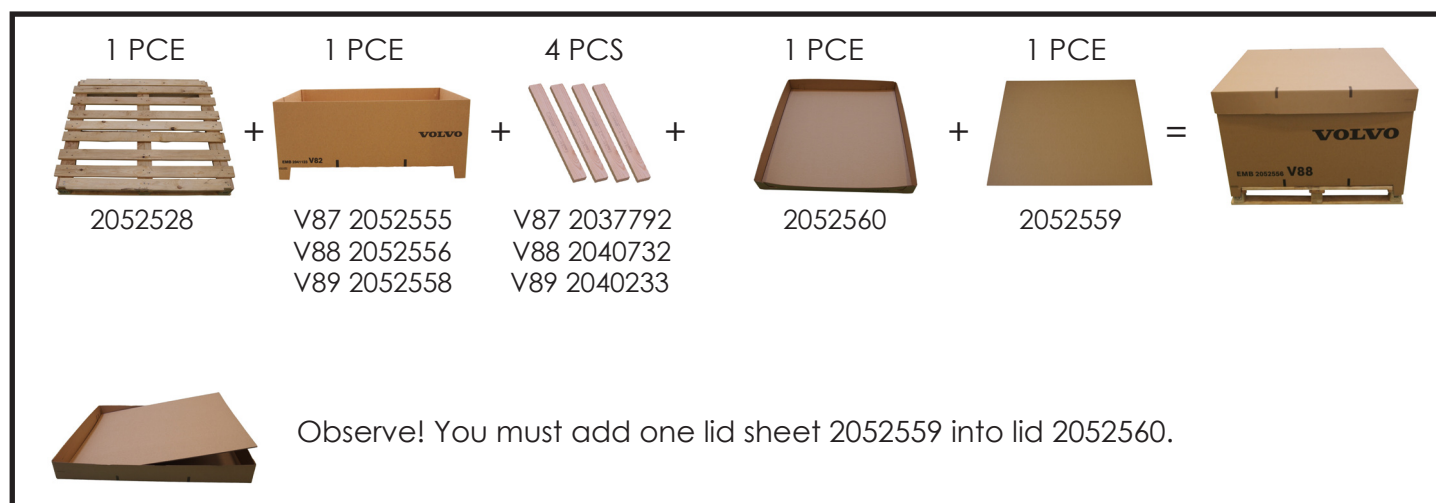

Name	Art.No	Inside	Outside	MOQ
Wooden Pallet V87-V88-V89	2052528	-	1140x980x135	13
Container V87	2052555	1113x954x390	1127x968x397	52
Container corner list L2 / V-assort. size 2	2037792	-	416x48x19	208
Container V88	2052556	1113x954x585	1127x968x593	52
Container corner list L3 / V-assort. size 3	2040732	-	611x48x19	208
Container V89	2052558	1113x954x780	1127x968x787	52
Container corner list L4 / V-assort. size 4	2040233	-	806x48x19	208
Container lid V87-V88-V89	2052560	1128x972x120	1140x980x130	208
Container lid sheet V87-V88-V89	2052559	-	1128x972x7	104

